


29.2180.01.0429

PEUGEOT, CITROËN, FIAT, IVECO


SELF-TAPPING FUEL STANDPIPE PICK-UP FITTING PROCEDURE FOR Ax2

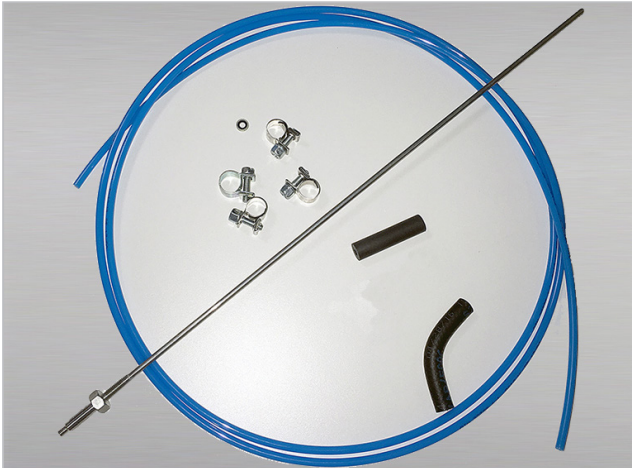

1. Kit contents.



2. Remove both fuel sender access covers on cab floor.

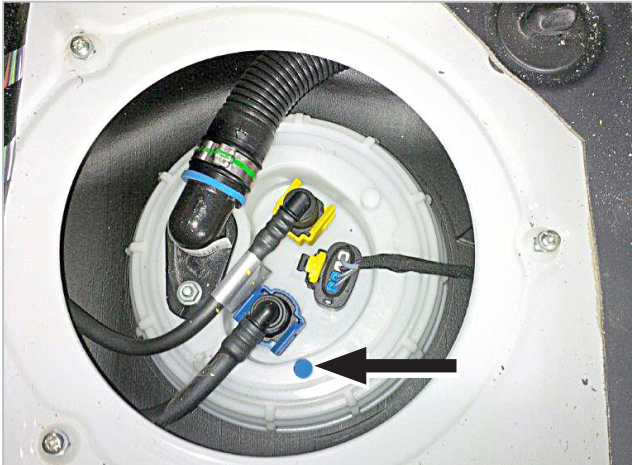

3. Carefully drill a pilot hole in centre of blue spigot. Avoid swarf entering fuel tank.




4. Drill hole out to 4.2mm. Avoid swarf entering fuel tank.

29.2180.01.0429

PEUGEOT, CITROËN, FIAT, IVECO

SELF-TAPPING FUEL STANDPIPE PICK-UP FITTING PROCEDURE FOR Ax2

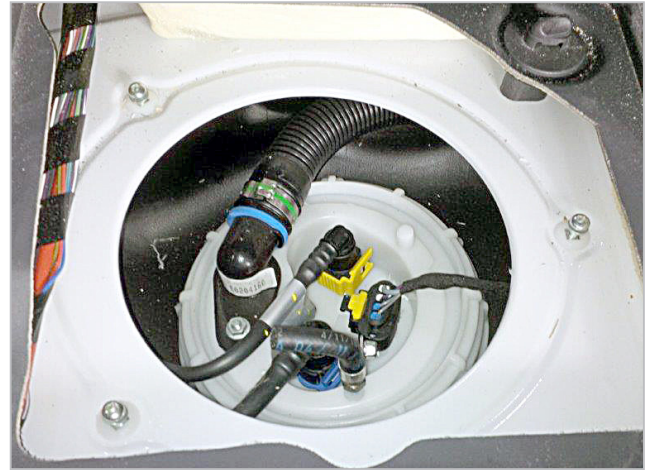


5. Check depth of fuel tank and cut standpipe to suit, 15 - 20mm off base of tank.
6. Screw in self-tapping standpipe, ensuring Dowty washer is in place and seals.

7. Fit rubber pipe connector and secure with hose clip.

PART NUMBER	DESCRIPTION	QTY
29.2100.17.1083	Standpipe Self-Tapping Ducato Boxer A	1
29.2100.17.1121	DOWTY Washer 8.4mm O/D, 5.2mm I/D	1
29.2100.01.1051	Clip – 9mm Fuel SS 48009 A	4
25.1888.80.0101	Fuel Rubber Elbow 3.5 x 9.5mm	1
29.2100.17.1129	Fuel Line 2mm ID, 4mm OD Blue 2 Metre	1
360.75.300	Hose Fuel – 3.5 x 3mm	0.05 m
29.2100.20.1062	Inst. Fuel Kit Self-Tapping P/N 0429 A	1



8. Fit blue fuel line into rubber connector and secure with hose clip.

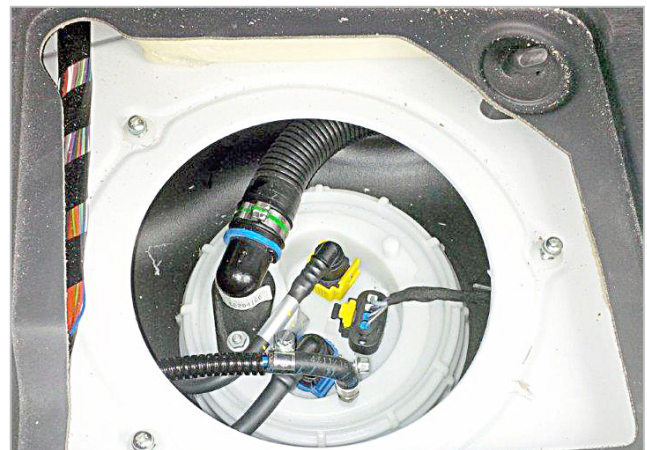

9. Route fuel line to front of tank and fit to FM pump.