

29.2180.01.0435

FUEL TANK SENDER STANDPIPE INSTALLATION INSTRUCTIONS

Remove the fuel tank sender unit from the vehicle and drill an 8mm hole, for the standpipe, in an appropriate location.

Secure the standpipe (22.1000.20.1500) in place.

Using the 9mm stainless steel clips (29.2100.01.1051) secure the 2mm I.D. blue pipe (890.31.054) to the standpipe using rubber connection (360.75.300), Figure 1.

Cut the blue fuel pipe to length and refit sender unit to fuel tank. Avoid the float mechanism, Figure 2.

Fit 2mm I.D. blue fuel (890.31.054) to the standpipe using the rubber (360.75.300) and 9mm (29.2100.17.1004) clips.



NOTE

If using on Hydronic heater use connection pieces in main kit.

Figure 3 shows the standpipe position on the VW Crafter sender unit.



ATTENTION!

Remove nylon insert from standpipe before use.

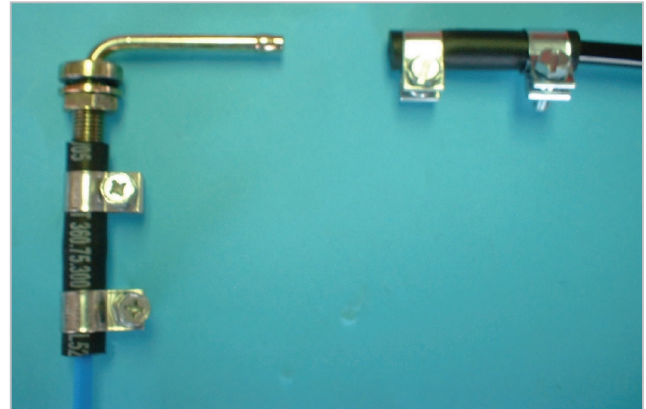


Figure 1

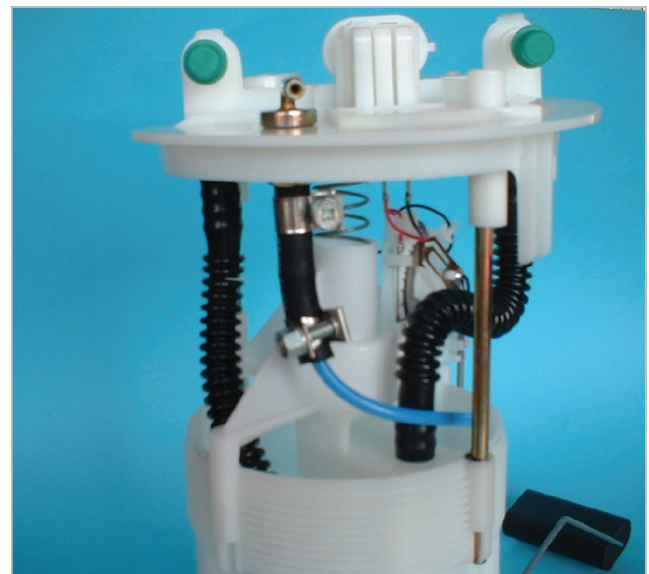


Figure 2

PART NUMBER	DESCRIPTION	QTY
22.1000.20.1500	Fuel Tank Sender Unit Pipe	1
360.75.300	Hose Fuel – 3.5 x 3mm	0.05 m
890.31.054	Fuel Line DIN 73378 4x1-PA12-HL-Blue	0.3 m
29.2100.01.1051	Clip – 9mm Fuel SS 48009 A	2
360.75.300	Hose Fuel – 3.5 x 3mm	0.05 m
360.75.300	Hose Fuel – 3.5 x 3mm	0.05 m
29.2100.17.1129	Fuel Line 2mm ID, 4mm OD Blue 2 Metre	1
29.2100.17.1004	Clip – 9mm Pt. 46009 A	4
29.2100.20.1066	Inst. Fuel Kit Universal Sender P/N 0435	1

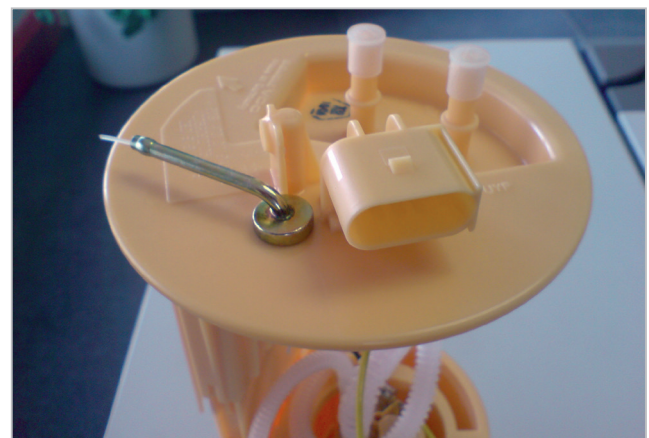


Figure 3